

IMPORTANT SAFETY INSTRUCTIONS READ CAREFULLY AND KEEP FOR FUTURE USE.

This user guide is available for download on the brand's website.

O

Safety instructions



Important:

When you receive the appliance, unpack it immediately. Give it an overall inspection. Make note of any concerns or reservations on the delivery slip and make sure to keep a copy of this form. Before starting your appliance, please read this installation guide carefully to familiarise yourself quickly with its operation. Keep this user guide with your appliance. If the appliance is ever sold or transferred to another person, ensure that the new owner receives this user guide.

Please become familiar with these recommendations before installing and using your oven. They were written for your safety and the safety of others.

— Before using your oven for the first time, heat it while empty for approximately 15 minutes. Make sure that the room is sufficiently ventilated.

— This oven was designed for use by private persons in their homes. This oven does not contain any asbestos-based components.

— Your appliance is intended for standard household use. Do not use it for commercial or industrial purposes or for any other purpose than that for

which it was designed.

— Do not modify or attempt to modify any of the characteristics of this appliance. This would be dangerous to your safety.

— Never place tin foil directly in contact with the oven floor as the build up of heat may damage the enamel.

— Do not place heavy weights on the open oven door, and make sure that children are able neither to climb nor sit on it.

— Do not use your oven as a larder or to store any items after use.

— After using your oven, make sure that all the controls are in their stop position.

— The oven must be turned off when cleaning inside the oven.

— Before removing the glass window, allow the appliance to cool down.



This appliance may be used by children aged 8 years and older, and by persons with impaired physical sensorial or mental capacities, or without experience or knowledge, if they are supervised or have received prior instructions on how to use the appliance safely and have understood the risks involved.

Children must not be allowed to play with the appliance. Cleaning and maintenance operations must not be carried out by children without supervision.

— Children must be supervised to prevent them from playing with the appliance.

WARNING: The appliance and its accessible parts become hot during use. Be careful not to touch the heating elements inside the oven. Children under 8 years old must not be allowed near it unless they are supervised at all times.

— This appliance is designed to cook with the door closed.

— Before pyrolytic cleaning of your oven, remove all accessories and any thick deposits.

— During cleaning, the surfaces may become warmer than under normal conditions of use. It is advisable to keep children away from the appliance.

— Do not use a steam cleaner.

— Before removing the back wall, the appliance must be powered off. After cleaning, the back wall must be put back in place in accordance with the instructions.

— Do not use abrasive cleaning products or hard metal scrapers for cleaning the oven's glass door, as they could scratch the surface and cause the glass to shatter.

 **WARNING:** Make sure the appliance is disconnected from the power before replacing the lamp in order to avoid the risk of electric shock. Change the lamp only when the appliance has cooled down. To unscrew the view port and the light, use a rubber glove, which will make disassembly easier.

 The electrical plug must remain accessible after installation.

It must be possible to disconnect the appliance from the power supply, either using a plug or by fitting a switch on the fixed wiring system in accordance with installation rules.

If the power cable is damaged, it should be replaced by the manufacturer, its after-sales service department or by a similarly qualified person in order to avoid danger.

— This appliance may be installed either under a worktop or in a cabinet column, as indicated on the installation diagram.

— Centre the oven in the unit so as to ensure a minimum distance of 10 mm between the appliance and the surrounding unit. The material of the unit supporting the appliance must be heat-resistant (or covered with a heat-resistant material). For greater stability, attach the oven to the unit with 2 screws through the holes provided on the side panels.

1 Installation



1.1 UNPACKING

Remove all the protection elements. Check and respect the appliance's characteristics that appear on the nameplate (1.1.1)

1.2 CHOICE OF LOCATION AND BUILDING IN

The diagrams show the dimensions of a cabinet that will be able to hold your oven.

This appliance may be installed either under a worktop or in a cabinet column, as indicated on the installation diagram (1.2.1 - 1.2.2). If the cabinet is open, its opening must be 70 mm maximum. Your oven has optimised air circulation that allows it to achieve remarkable cooking and cleaning results if the following guidelines are followed :

Center the oven in the cabinet to ensure a minimum distance of 10 mm with adjacent cabinets (1.2.3). The material or coating of the cabinet must be heat-resistant. For greater stability, attach the oven in the cabinet with two screws through the holes provided for this purpose on either side of the front inner panel.

- Drill a 2 mm diameter hole in the cabinet panel to avoid splitting the wood.
- Attach the oven with the two screws (1.2.4) .

Tip:

To be certain that you have properly installed your appliance, do not hesitate to call on a household appliance specialist.

1.3 ELECTRIC CONNECTION

The appliance must be recess-fitted correctly to ensure electrical safety.

The electrical connections are made before the appliance is installed in its housing.

Ensure that:

- the electrical installation has sufficient voltage,
- the electrical wires are in good condition,
- the diameter of the wires complies with the installation requirements.

During maintenance operations, the appliance must be unplugged from the electrical grid; fuses must be switched off or removed.

Warning:

The safety wire (green-yellow) is connected to the appliance's  terminal and must be connected to the earth terminal of the electrical set-up.

The fuse in your set-up must be 16 amperes.

If the electrical installation in your residence requires any changes in order to hook up your appliance, call upon a professional electrician. If the oven malfunctions in any way, unplug the appliance or remove the fuse corresponding to the sector where the oven is hooked up.

2 Accessories



2.1 This oven has 3 positions for the accessories: supports from 1 to 3 (2.1.1).

2.2 ACCESSORIES (depending on the model)

• Anti-rocking safety grid (2.2.1)

The grid can be used to hold all dishes and moulds containing foodstuffs to be cooked or browned. It can be used for barbecues (to be placed directly on the grid).

• Baking sheet (2.2.2)

This aluminium baking sheet features a food-grade non-stick surface and is designed especially for your pastry creations, particularly light pastries.

You can set your choux and puff pastries, meringues, madeleines and other delights directly on it.

N.B.: The baking sheet should never be used to hold baking dishes or cake moulds.

- **Multi-purpose 20 mm dish** (2.2.3)
- **Multi-purpose 45 mm dish** (2.2.4)

When inserted in the supports under the grid, it collects juice and fat from grilling, and can be used half-filled with water as a double-boiler.

- **45 mm multi-purpose tray. Fully accessible sliding rail system** (2.2.5)

The new sliding rail system with support (fully accessible) makes food more practical and easier to handle as the trays can be effortlessly pulled for simpler handling. The trays can be completely removed, providing full access (2.2.6).

Their stability ensures that food can be handled safely, reducing the risk of burns. This means that you can take food out of the oven far more easily (2.2.7).

The drip tray in the bottom of the oven collects juice and fat from grilling, and can be used half-filled with water as a double-boiler. Do not directly place meat or poultry on the drip tray for roasting. This would inevitably produce splashes and dirty the sides of the oven.

- **45 mm deep dish with a support grid for grilling** (2.2.8)

This is used to collect cooking juices from meat or fish placed directly on its grill in grill or pulsed grill sequence.

Never place this dish on the oven floor (risk of damage to the enamel) except in grill position (the oven floor heating element does not operate in these positions).



Warning:

Before starting a pyrolysis cleaning cycle, make sure that any accessories that are not pyrolysis safe have been removed from the oven (sliding rails, baking trays, chrome-plated grills, and so on) as well as any cookware. The side grills are pyrolysis safe and may be left inside the oven during pyrolysis.

CLEANING THE OUTER SURFACES

To clean both the electronic programmer window and the oven door, use a window washing product applied to a soft cloth. Do not use abrasive creams or scouring sponges.

3.1 CLEANING THE INNER SURFACES

NO PYROLYSIS OVENS

- Smooth side panel models (3.1.1).
- Clean the still-warm oven with a cloth dipped in hot, soapy water.

3.2 REMOVING THE WIRE SHELF SUPPORTS



Warning

For any cleaning operation inside the oven cavity, the oven must be switched off.

Before starting to disassemble the appliance, allow it to cool down and ensure that it has been disconnected from the power supply.

Wire shelf supports with hooks.

To remove them, lift up the front part of the shelf support to disengage the front hook from its housing (3.2.1).

Then gently pull the whole of the support towards you and lift the back to release the rear hook from its housing (3.2.2). Pull out the two shelf side supports.

PYROLYSIS OVENS

WHAT IS PYROLYSIS?



Warning

Remove any cookware, grids and trays from the oven and clean any major spill residue before carrying out the pyrolysis.



Tip

Your oven is equipped with enamelled wire shelf supports: these need to be removed before running the pyrolysis cycle.

- Pyrolysis is a cycle during which the oven cavity is heated to a very high temperature in order to eliminate soiling from splattering and spills. The smoke and odours released are destroyed as they move through a catalyser.

- Pyrolysis is not necessary after each cooking cycle, simply when the degree of soiling warrants it.

- As a safety measure, cleaning only occurs after the door locks automatically. As soon as the internal temperature of the oven exceeds cooking temperatures, it is impossible to unlock the door even if the "function selector" is set to 0.

WHEN TO USE PYROLYSIS

If your oven emits smoke during preheating or releases large amounts of smoke during cooking. If your oven releases an unpleasant odour when cooled after various cooking applications (lamb, fish, barbecue, etc...).

Relatively clean cooking operations:

Biscuits, vegetables, pastry, quiches, soufflés

Splatter-free cooking

->pyrolysis is not warranted.

Messy cooking operations:

Meats, fish (in a dish), stuffed vegetables.

->Pyrolysis may be warranted after three cooking cycles.

Very messy cooking operations:

Large cuts of meat on the spit.

-> Pyrolysis can be performed after one cooking application of this kind, as there is a lot of splattering.



Tip

You should not wait until the oven is overly coated in grease to initiate a cleaning cycle.

3.3 CLEANING THE DOOR

- Removing the door (depending on the model)



Warning

— Do not use abrasive cleaning products or hard metal scrapers for cleaning the oven's glass door, which could scuff the surface and cause the glass to shatter.

— Before removing the glass window, allow the appliance to cool down.

- Open the door completely and block it open using the two red stops (3.3.1).

They are supplied with your machine in the plastic pack.

- To remove the frame and glass assembly, proceed as follows:

Insert the two red stops in the **A** slots designed for this (3.3.2).

- Lever the assembly to detach the frame and the glass (3.3.3).

- Remove the frame and the glass (3.3.4).

- Remove all the door's interior windows by rotating them.

This assembly comprises 2 glass windows, the 1st of which has 2 rubber stops on the 2 front corners.(3.3.5).

- Clean the glass using a soft sponge and washing-up liquid. Do not soak the window in water.

Do not use abrasive creams or scouring sponges. Rinse with clean water and dry off with a lint-free wiper.

- After cleaning, replace the 1st glass in the door.

Reposition the 2 black rubber stops on the front corners of the 2nd glass, taking care to follow the indications on the

glass:

top left: L

top right: R

Then replace the door and the 2nd glass, positioning it on the first (3.3.6).

Place the glass frame assembly back in the door (3.3.7).

- Take care to correctly slot the frame under the spigot next to the hinge (3.3.8).

- Attach the frame by tightening it with the door.

Do not press on the frame alone. (3.3.9).

Your appliance can now be used again.

3.4 REPLACING THE OVEN LAMP



WARNING:

Make sure the appliance is disconnected from the power before replacing the lamp in order to avoid the risk of electric shock. Change the lamp only when the appliance has cooled down.

Remove the wire shelf supports.

- The lamps are accessible inside the oven (3.4.1).

- Use the red stop as a lever to remove the glass (3.4.2).

- Remove the bulb (3.4.3).

Bulb specification:

- 25W,

- 220-240 V~,

- 300°C

- G9.

- Replace the bulb, then replace the glass and reconnect the oven.

4 Environment



4.1 CARE FOR THE ENVIRONMENT

- This appliance's packing materials are recyclable. Please recycle them and help protect the environment by depositing them in municipal containers provided for this purpose.



- Your appliance also contains many recyclable materials. It is therefore marked with this logo to indicate that used appliances must not be mixed with other waste.

The appliance recycling organised by your manufacturer will therefore be conducted in optimum conditions, in accordance with European directive 2002/96/EC on electrical and electronic equipment waste. Consult your local authority or your retailer to locate your nearest used appliance drop-off points.

- We thank you for your help in protecting the environment.

STAND-BY MODE.

In order to limit power consumption, the display will fade after 30 seconds of inactivity. Depending on the model of oven, when a delayed start is programmed, an animation will display alternately with the time, indicating that the oven is in "standby mode". The display will return to normal brightness if the cooking selector is activated or if a button is pressed.

GENUINE REPLACEMENT PARTS

During maintenance work, request that only **certified genuine replacement parts are used.**

